


Komponenty / Components: 2x MMU374, 1x MMS504, 1x MMS534, 1x MMS900302421, 1x TOC2425NBR70


- 1) Vložit O-Kroužek TOC2425NBR70 do drážky MMS534I.
- 2) Nasadit podložku MMS900302421 na O-kroužek.

- 1) Insert the O-ring TOC2425NBR70 into the MMS534I slot.
- 2) Put the washer MMS900302421 on the O-ring.

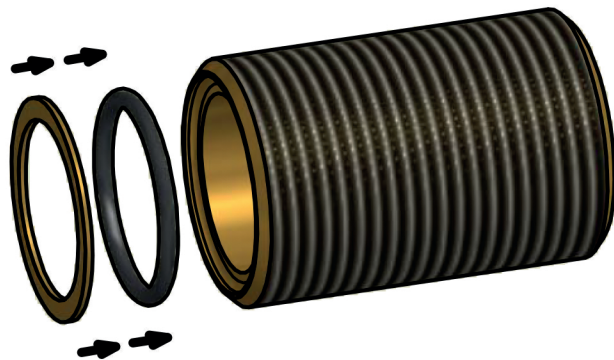


- 3) Našroubovat matici MMU374I č.1 na tělo MMS534I.

- 3) Screw the nut MMU374I n.1 on the body MMS534I.

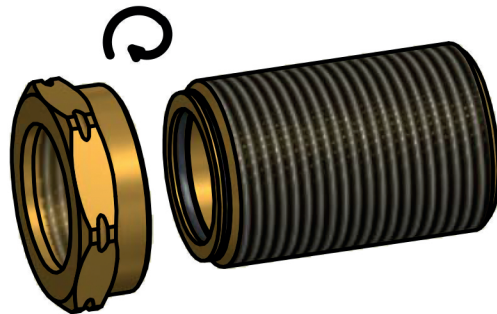


- 4) Vložit teleskopickou vložku MMS504 do matice MMU374I č. 2.

- 4) Screw the nut MMSU504 nr.2 into MMU374 body

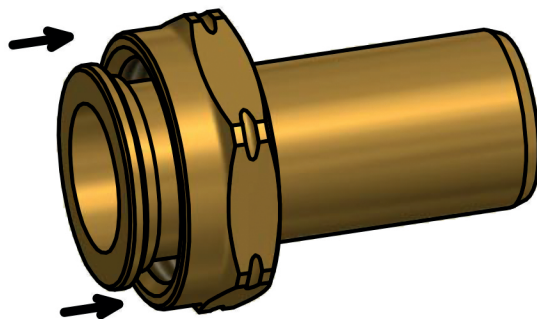

- 5) Vložit teleskopickou vložku MMS504 s maticí MMU374 č. 2 do těla MMS53I.

- 5) Insert the telescopic liner MMS504 together with the nut MMU374 n. 2 into the MMS53I body.

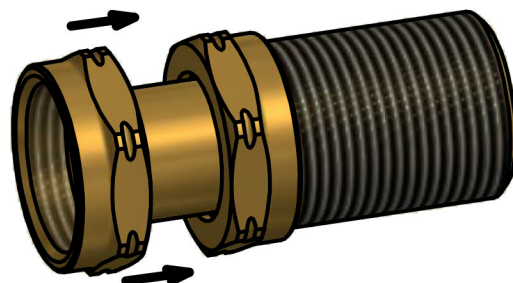

Hotový celek:

Finished part:

